

# List Of Effective Pages

PAGE NUMBER	SOFTWARE VERSION NUMBER (DATE)
List of Effective Pages	UB3.0.1.6G Change 3 (3/31/97)
Table of Contents	UB3.0.1.6G Change 3 (3/31/96)
Chapter 1	UB3.0.1.5G (8/28/96)
Chapter 2	UB3.0.1.5G (8/28/96)
Main Menu Bar	UB3.0.1.5G (8/28/96)
Chapter 3	UB3.0.1.5G (8/28/96)
Chapter 4	UB3.0.1.6G Change 3 (3/31/96)
Chapter 5	UB3.0.1.5G (8/28/96)
Chapter 6	UB3.0.1.6G Change 3 (3/31/96)
Chapter 7	UB3.0.1.5G (8/28/96)
Chapter 8	UB3.0.1.5G (8/28/96)
System Menu Bar	UB3.0.1.5G (8/28/96)
Chapter 9	UB3.0.1.6G Change 3 (3/31/96)
Chapter 10	UB3.0.1.6G Change 2 (1/27/97)
Chapter 11	UB3.0.1.6G Change 2 (1/27/97)
Chapter 12	UB3.0.1.5G (8/28/96)
Chapter 13	UB3.0.1.6G Change 3 (3/31/96)
Chapter 14	UB3.0.1.5G (8/28/96)
Chapter 15	UB3.0.1.5G (8/28/96)
Appendix A	UB3.0.1.5G (8/28/96)

## **List Of Effective Pages - Continued**

Appendix B	UB3.0.1.5G (8/28/96)
Appendix C	UB3.0.1.5G (8/28/96)
Appendix D	UB3.0.1.5G (8/28/96)
Appendix E	UB3.0.1.5G (8/28/96)
Appendix F	UB3.0.1.5G (8/28/96)
JPI (PLRS Interface)	UB3.0.1.5G (8/28/96)
TCIM (Tactical Communication Interface Module)	UB3.0.1.5G (8/28/96)
TLC-10 (Telecommunications Line Controller)	UB3.0.1.5G (8/28/96)

---

# **Unified Build 3.0.1.6GP4**

## **Change Page Replacement Guide**

Documentation updates for the Unified Build UBPATCH 3.0.1.6GP4 release are being issued in the form of change pages for the *Unified Build 3.0.1.6G User's Guide*.

### **Unified Build User's Guide - Volume 1**

To update the existing *Unified Build User's Guide*, remove pages or chapters as shown below and substitute the new pages/chapters as indicated. (Note: New pages are dated 3/31/97 and marked Change 3.)

<b><u>Remove (from old document)</u></b>	<b><u>Replace With (Change 3)</u></b>
List of Effective Pages	List of Effective Pages
Table of Contents Pages i through xxviii	Table of Contents Pages i through xxviii
Chapter 4 Pages 1 through 12	Chapter 4 Pages 1 through 12
Chapter 6 Pages 1 through 132	Chapter 6 Pages 1 through 132
Chapter 9 Pages 1 through 52	Chapter 9 Pages 1 through 52

Once you have completed the insertion of this change, ensure that you update the Change Record Sheet in this guide to reflect the inserted change's appropriate date, software level, and the date the change was entered. Then initial/sign the Change Record Sheet.

# **Unified Build 3.0.1.6GP4**

## **Change Page Replacement Guide**

Documentation updates for the Unified Build UBPATCH 3.0.1.6GP4 release are being issued in the form of change pages for the *Unified Build 3.0.1.6G User's Guide*.

### **Unified Build User's Guide - Volume 2**

To update the existing *Unified Build User's Guide*, remove pages or chapters as shown below and substitute the new pages/chapters as indicated. (Note: New pages are dated 3/31/97 and marked Change 3.)

<b><u>Remove (from old document)</u></b>	<b><u>Replace With (Change 3)</u></b>
List of Effective Pages	List of Effective Pages
Table of Contents Pages i through xxviii	Table of Contents Pages i through xxviii
Chapter 13 Pages 1 through 118	Chapter 13 Pages 1 through 118

Once you have completed the insertion of this change, ensure that you update the Change Record Sheet in this guide to reflect the inserted change's appropriate date, software level, and the date the change was entered. Then initial/sign the Change Record Sheet.

---

# table of contents

CHAPTER 1: INTRODUCTION .....	1-1
1.1 joint maritime command information system .....	1-1
1.1.1 JMCIS OVERVIEW .....	1-1
1.1.2 JMCIS SOFTWARE ENVIRONMENT .....	1-2
1.1.2.1 Unified Build Components– At the Core of JMCIS.....	1-3
1.1.2.2 UB/JOTS Applications– On Top of the Core.....	1-6
1.1.3 SECURITY ADMINISTRATION .....	1-6
1.1.3.1 Classification.....	1-6
1.1.3.2 Account Groups and Roles.....	1-6
1.1.4 SYSTEM ARCHITECTURE.....	1-7
1.1.5 SYSTEM HARDWARE.....	1-7
1.2 THE UB USER'S GUIDE.....	1-8
1.2.1 USER'S GUIDE ORGANIZATION .....	1-8
1.2.2 MENU OPTION ORGANIZATION .....	1-10
1.3 OTHER SOURCES OF INFORMATION .....	1-10
CHAPTER 2: MAN-MACHINE INTERFACE .....	2-1
2.0 MAN-MACHINE INTERFACE .....	2-1
2.1 SYSTEM STARTUP .....	2-1
2.1.1 START JMCIS.....	2-2
2.1.2 ROLES.....	2-3
2.1.3 EXIT SYSTEM.....	2-3
2.2 USING THE SYSTEM .....	2-3
2.2.1 TRACKBALL OR MOUSE.....	2-3
2.2.2 MENU BAR, MENUS, AND TRACK POP-UP .....	2-5
2.2.2.1 Keyboard Equivalents.....	2-5
2.2.2.2 Double Dots After Option Name.....	2-6
2.2.2.3 Pop-Up Menus.....	2-6

2.2.2.4 Cascading Menus.....	2-6
2.2.3 WINDOWS.....	2-6
2.2.3.1 Group Boxes .....	2-7
2.2.3.2 Scroll Lists.....	2-7
2.2.3.3 Warning/Notification Windows.....	2-8
2.2.3.4 Hourglass.....	2-8
2.2.4 FUNCTIONAL WINDOW FEATURES .....	2-8
2.2.4.1 Buttons .....	2-9
2.2.4.2 Diamond Knobs .....	2-10
2.2.4.3 Checkboxes .....	2-10
2.2.4.4 List Boxes .....	2-10
2.2.4.5 Edit Fields.....	2-10
2.2.4.6 Copy and Paste within Edit Fields.....	2-11
2.2.4.7 Entering Position (Lat/Long) Values from the Keyboard .....	2-11
2.2.4.8 Pop-Up Menus .....	2-12
2.2.5 MANIPULATIVE WINDOW FEATURES .....	2-12
2.2.5.1 Drag Bars .....	2-13
2.2.5.2 Window Menu .....	2-13
2.2.5.3 Icon Box.....	2-14
2.2.5.4 Maximize Box.....	2-15
2.2.5.5 Active/Non-Active Windows .....	2-15
2.2.6 DATA ENTRY OPERATIONS .....	2-15
2.2.6.1 Position Hooking .....	2-15
2.2.6.2 Time Selection .....	2-16
2.2.7 GLOBAL MAP UPDATE FEATURES.....	2-16
2.2.8 MAP REDRAW STATUS.....	2-17
2.2.9 SELECTING TRACKS.....	2-18
2.3 TACTICAL DISPLAY .....	2-19
2.3.1 DISPLAY .....	2-19
2.3.2 MAP .....	2-19
2.3.3 TRACK SYMBOLS.....	2-19

---

2.3.4 OTHER PLOTTED ITEMS .....	2-20
2.3.5 TACTICAL DISPLAY MODES.....	2-21
2.4 FUNCTION KEYS, EXTEND CHAR, & DIAMOND KEYS.....	2-21
THE MAIN MENU BAR .....	MAIN-1
CHAPTER 3: SYSTEM.....	3-1
3.0 SYSTEM.....	3-1
3.1 SET WINDOWS FONT .....	3-1
3.2 SET MENUS FONT .....	3-3
3.3 EXIT .....	3-4
CHAPTER 4: CHART.....	4-1
4.0 CHART .....	4-1
4.1 MAP LOADER.....	4-1
4.1.1 READY TO DRAW STATUS .....	4-4
4.1.2 RAW FORMAT-STATUS.....	4-4
4.1.2.1 ADRG MAP PREPARATION .....	4-5
4.1.3 RAW FORMAT CD STATUS.....	4-7
4.2 EJECT CDROM.....	4-8
4.3 RESET MAP SERVER.....	4-9
4.4 CHART INSETS.....	4-9
4.4.1 CHART INSET MENUS.....	4-9
4.4.2 CLOSE A CHART INSET WINDOW .....	4-10
4.5 RESTART CHART .....	4-10
CHAPTER 5: VIEWS.....	5-1
5.0 VIEWS.....	
5.1 SET VIEW FILTER.....	5-2
5.2 ACTIVATE WINDOW.....	5-3

CHAPTER 6: COMMS.....	6-1
6.0 COMMS.....	6-1
6.0.1 MESSAGE DATABASE .....	6-2
6.0.2 SUMMARY OF COMMON OPERATIONS– COMMS .....	6-3
6.0.3 COMMS PULL-DOWN MENU .....	6-4
6.1 LOCAL OPNOTES.....	6-5
6.1.1 CREATE A NEW OPNOTE.....	6-7
6.1.2 OPNOTES POP-UP MENU .....	6-9
6.2 INCOMING OPNOTES .....	6-9
6.3 OPERATOR MESSAGES .....	6-11
6.3.1 OPERATOR MESSAGE EXCHANGE BOX .....	6-13
6.3.2 OPERATOR MESSAGE COMPOSITION BOX.....	6-13
6.4 LOG MGR INCOMING .....	6-14
6.4.1 ADD AN INCOMING MESSAGE LOG.....	6-17
6.4.2 EDIT A LOG.....	6-18
6.4.3 SYSTEM-ASSIGNED DEFAULT LOG .....	6-19
6.5 LOG MGR OUTGOING .....	6-21
6.5.1 ADD AN OUTGOING MESSAGE LOG .....	6-24
6.6 INCOMING MSG LOG (F9).....	6-25
6.6.1 VIEW RAW DATA.....	6-32
6.6.2 INCOMING MESSAGE LOG POP-UP MENU.....	6-34
6.7 OUTGOING MSG LOG .....	6-38
6.7.1 VIEW AND EDIT RAW DATA.....	6-43
6.7.2 OUTGOING MESSAGE LOG POP-UP MENU .....	6-45
6.8 MSG HEADERS.....	6-48
6.8.1 CREATE A MESSAGE HEADER.....	6-50
6.8.1.1 HEADER EDIT Pop-Up Menu .....	6-52
6.8.2 EDIT HEADERS POP-UP MENU .....	6-53
6.9 AUTO-FORWARD TABLE .....	6-53
6.9.1 ADD ENTRIES.....	6-55
6.9.1.1 Setup Auto Forward Table for a Track Broadcast .....	6-59

---

6.9.1.2 Relay Messages to Another System.....	6-60
6.9.1.3 Pre-Select Multiple Destinations from a To: Line in a Header Window .....	6-60
6.9.2 MESSAGE AUTO FORWARD POP-UP MENU .....	6-61
6.10 DDN (DEFENSE DATA NETWORK) HOST TABLE.....	6-62
6.11 STU III DIRECTORY .....	6-63
6.12 DECODER STATUS .....	6-65
6.13 MESSAGE ALERTS.....	6-66
6.13.1 VIEW ALERT-GENERATING MESSAGES .....	6-69
6.13.1.1 View Raw Data.....	6-72
6.13.1.2 MSG ALERT Pop-Up Menu .....	6-73
6.14 DDN NET PING .....	6-73
6.15 COMMUNICATIONS.....	6-76
6.15.1 SYSTEM-PROVIDED COMMUNICATIONS INTERFACES.....	6-78
6.15.2 ADD A CHANNEL .....	6-88
6.15.3 EDIT A CHANNEL .....	6-89
6.15.3.1 COMMS EDIT Window.....	6-90
6.15.3.2 EDIT NTDS Window .....	6-94
6.15.3.3 Edit AMP Interface Channel .....	6-96
6.15.3.4 EDIT API Window .....	6-100
6.15.3.5 EDIT MDX Window .....	6-101
6.15.3.6 EDIT NETWORK Window .....	6-106
6.15.3.7 Edit RF-NET Interface Channel .....	6-108
6.15.4 COMMUNICATIONS POP-UP MENU.....	6-111
6.15.4.1 START, STOP, and RESTART .....	6-111
6.15.4.2 WINDOW .....	6-112
6.15.4.3 SET DEFAULTS AND MASTER DEFAULT OPTIONS.....	6-125
6.15.4.4 PRINT POP-UP OPTION .....	6-127
6.16 CHANNEL STATUS.....	6-128
6.17 NAV UPDATE RATE.....	6-130

CHAPTER 7: SUPPORT .....	7-1
7.0 SUPPORT.....	7-1
CHAPTER 8: MISC .....	8-1
8.0 MISC.....	8-1
SUMMARY OF COMMON OPERATIONS.....	8-2
8.1 VERSION DESCRIPTION .....	8-3
8.2 SYSTEM STATUS.....	8-5
8.2.1 SELECT SYSTEM STATUS CATEGORIES .....	8-5
8.2.2 SYSTEM STATUS WINDOW.....	8-6
8.2.2.1 Track Totals .....	8-6
8.2.2.2 FOTC .....	8-7
8.2.2.3 V6.....	8-8
8.2.2.4 Terminal.....	8-9
8.2.2.5 Messages .....	8-11
8.2.2.6 Broadcasts.....	8-12
8.3 TRACK STATUS .....	8-12
8.4 FILE STATUS.....	8-15
8.5 SYSTEM SERVICES.....	8-16
8.6 ALERT DISPLAY FILTER .....	8-19
8.6.1 EDIT ALERT FILTER.....	8-20
8.7 ALERT LOG.....	8-23
8.8 ARCHIVE-RESTORE .....	8-26
8.8.1 ARCHIVE FILES.....	8-29
8.8.2 RESTORE FILES .....	8-30
8.8.3 ARCHIVE-RESTORE FILES POP-UP MENU.....	8-30
8.9 PRINTER CHOSER .....	8-32
8.9.1 MANIPULATE PRINTER QUEUE.....	8-34
8.9.2 JMCIS PRINTER CHOSER POP-UP MENU.....	8-36
8.10 TROUBLE REPORTS .....	8-36
8.10.1 ADD A TROUBLE REPORT.....	8-38

---

8.10.2 TROUBLE REPORTS POP-UP MENU.....	8-39
8.11 PASSDOWN WATCH LOG .....	8-40
8.12 SCREEN SAVER .....	8-41
8.13 TOP 25 PROCESSES .....	8-42
8.14 DIAGNOSTICS (MONITOR) .....	8-45
 THE GCCS SYSTEM MENU BAR .....	GCCS-1
EXIT .....	GCCS-1
 Chapter 9: Map Options .....	9-1
9.1 Zoom (F1) .....	9-5
9.2 Double (F2).....	9-5
9.3 Half (F3).....	9-6
9.4 Center/Width (F4).....	9-6
9.5 Whole World.....	9-8
9.6 BEARING/RANGE (F6) .....	9-8
9.7 CIRCLE/RANGE (F7).....	9-9
9.8 Center On .....	9-10
9.8.1 Center On– Cursor .....	9-11
9.8.2 Center On– Ownship .....	9-11
9.8.3 Center On– Track .....	9-12
9.8.4 Center On– Follow .....	9-14
9.9 Default Chart .....	9-15
9.10 Set Default Chart .....	9-15
9.11 Previous Chart .....	9-17
9.12 Add Product.....	9-17
9.13 Map CONTROL.....	9-18
9.14 VECTOR DISPLAY CONTROL .....	9-23
9.14.1 DRAWING ATTRIBUTES.....	9-26
9.14.2 Edit RULES WINDOW.....	9-27
9.15 VPF SPATIAL QUERY.....	9-30

9.16 Colors.....	9-32
9.17 Intensity.....	9-34
9.18 Country Colors .....	9-35
9.18.1 Change Country Color .....	9-36
9.18.2 LIST COUNTRIES Pop-Up Menu .....	9-38
9.19 Features .....	9-40
9.19.1 EDIT Map Features.....	9-42
9.19.1.1 CONTOURS EDIT Window.....	9-45
9.19.1.2 Edit Digital Bottom Depth Database.....	9-46
9.19.2 FEATURES Pop-Up Menu.....	9-47
9.20 Chart Monitor .....	9-48
9.21 LOS PROFILE .....	9-48
9.21.1 LOCATION.....	9-50
9.21.2 GRID LINES.....	9-51
9.21.3 AXIS UNITS .....	9-51
 CHAPTER 10: PLOT CONTROL.....	10-1
10.0 PLOT CONTROL .....	10-1
SUMMARY OF COMMON OPERATIONS– PLOT CONTROL.....	10-2
10.1 SYMBOL LABELS .....	10-3
10.1.1 SYMBOL ANNOTATION BOX .....	10-4
10.1.2 TEXT SIZE .....	10-8
10.1.3 SYMBOL SIZE.....	10-8
10.2 SPECIAL CONTROLS .....	10-9
10.2.1 SPECIAL LABELS BOX .....	10-10
10.2.2 DR (DEAD RECKON) MODE BOX.....	10-11
10.2.3 SPEED LEADER MODE BOX .....	10-12
10.2.4 TYPE INDICATORS BOX.....	10-12
10.2.5 LOB MODE BOX .....	10-13
10.2.6 ALERT INDICATORS BOX.....	10-13
10.3 SLASH TIMES .....	10-13

---

---

10.3.1 VIEW AND SET SLASH TIMES– CAT/THREAT.....	10-14
10.3.2 VIEW AND SET SLASH TIMES– MISC. LINK11.....	10-15
10.3.3 SLASH TIMES POP-UP MENU .....	10-16
10.4 AUTO PLOT-OFF.....	10-17
10.4.1 AUTO PLOT-OFF TIMES– CAT/THREAT .....	10-17
10.4.2 AUTO PLOT-OFF TIMES– MISC. LINK11.....	10-19
10.4.3 AUTO PLOT-OFF TIMES POP-UP MENU .....	10-19
10.5 TRACK TYPE TOGGLES.....	10-20
10.5.1 TRACK TYPE BOX .....	10-22
10.5.2 REAL/EXERCISE BOX .....	10-22
10.5.3 TRACK SCOPE BOX.....	10-23
10.5.4 MODES BOX .....	10-23
10.5.5 LINK TRACKS BOX .....	10-23
10.5.6 SPA 25(G) BOX.....	10-23
10.5.7 ELINT TRACKS BOX .....	10-24
10.5.8 ELINT BY ELNOT .....	10-24
10.6 TRACK TYPE HILITES.....	10-25
10.6.1 TRACK TYPE BOX .....	10-27
10.6.2 REAL/TRAINING BOX.....	10-27
10.6.3 TRACK SCOPE BOX.....	10-27
10.6.4 MODES BOX .....	10-27
10.6.5 LINK TRACKS BOX .....	10-27
10.6.6 SPA 25(G) BOX.....	10-28
10.7 TRACK CONTROL .....	10-28
10.7.1 USING TRACK CONTROLS .....	10-28
10.8 ATTRIBUTE TOGGLES .....	10-31
10.8.1 USING ATTRIBUTE TOGGLES .....	10-31
10.8.2 ATTRIBUTE TOGGLES FOR MISC. LINK11.....	10-33
10.8.3 ATTRIBUTE TOGGLES EXAMPLES.....	10-33
10.8.3.1 AOUs .....	10-33
10.8.3.2 Speed Leaders.....	10-34

10.8.3.3 Dead Reckoning .....	10-35
10.8.3.4 DR Trailers.....	10-36
10.9 SYMBOLS ON/OFF/DOTS .....	10-37
10.9.1 SYMBOLS ON/OFF/DOTS– CAT/THREAT .....	10-37
10.9.2 SYMBOLS ON/OFF/DOTS– MISC. LINK-11 .....	10-39
10.9.3 SYMBOLS ON/OFF/DOTS– UNITS.....	10-40
10.10 STORED PLOT CONTROLS .....	10-41
10.10.1 SAVE PLOT CONTROL SETTINGS.....	10-43
10.10.2 STORED PLOT CONTROLS POP-UP MENU .....	10-43
10.11 FILTERED TRACKS.....	10-44
10.12 G-SIT.....	10-45
10.12.1 TIME SETTINGS.....	10-48
10.12.2 GSIT POP-UP MENU .....	10-48
10.13 SITE CONTROLS .....	10-49
10.13.1 SITES .....	10-50
10.13.2 SECTORS .....	10-51
10.13.3 PRIORITY .....	10-51
10.13.4 LABELS.....	10-52
10.14 DECLUTTER.....	10-53
10.14.1 DYNAMIC DECLUTTER.....	10-54
10.14.2 DECLUTTER FREEZE.....	10-55
10.14.3 NO DECLUTTER.....	10-55
10.15 SET MASTER REF .....	10-56
10.16 TRACKCONTROL STORAGE.....	10-57
10.16.1 ALL TRACKS .....	10-57
10.16.2 NO TRACKS .....	10-57
 CHAPTER 11: TRACKS .....	11-1
11.0 TRACKS .....	11-1
11.0.1 TRACK DATABASE .....	11-2
11.0.2 TRACK REPORTS .....	11-3

---

11.0.3 TRACK APPEARANCE.....	11-4
11.0.4 TRACK IDENTIFICATION .....	11-5
11.0.5 TRACK SELECTION .....	11-6
11.0.6 TRACK MERGE AND ASSOCIATION.....	11-7
11.0.6.1 Creating Track Associations.....	11-8
11.0.6.2 Breaking Track Associations .....	11-10
11.0.7 SUMMARY OF COMMON OPERATIONS– TRACKS .....	11-10
11.0.8 TRACKS PULL-DOWN MENU .....	11-11
11.1 CREATING NEW TRACKS– PLATFORM, ELINT, ACOUSTIC, AND UNIT.....	11-13
11.1.1 TRACK SCOPE AND TYPE.....	11-13
11.1.2 REPORT TYPE .....	11-14
11.1.3 ENTER FIRST REPORT.....	11-16
11.1.3.1 ENTER FIRST REPORT Window Fields.....	11-18
11.1.3.2 EDIT Window.....	11-24
11.2 NEW ELINT TRACK .....	11-25
11.3 NEW ACOUSTIC TRACK.....	11-25
11.4 NEW UNIT.....	11-25
11.5 COPY .....	
11.6 EDIT.....	
11.6.1 TRACK EDIT WINDOW.....	11-28
11.6.2 PLATFORM OR AMBIGUITY TRACKS .....	11-29
11.6.3 LINK TRACKS .....	11-37
11.6.3.1 EDIT Link Tracks– ACDS/LINK11EDO/LINK11IH Interfaces .....	11-38
11.6.3.2 Link (PEDO/PIH) Tracks.....	11-41
11.6.4 SPA-25(G), RAYCAS V TRACKS .....	11-49
11.6.5 EMITTER/ELINT TRACKS.....	11-53
11.6.6 ACOUSTIC/SUB TRACKS .....	11-60
11.6.7 UNIT TRACKS.....	11-67
11.6.8 FCS TRACKS .....	11-73
11.6.9 EDIT WINDOW POP-UP MENU .....	11-77

11.6.9.1 CANDIDATE PLOT .....	11-77
11.6.9.2 CANDIDATES .....	11-77
11.6.9.3 CENTER.....	11-77
11.6.9.4 DELETE .....	11-78
11.6.9.5 INTELL DATABASE SEARCH .....	11-79
11.6.9.6 DELETE .....	11-80
11.6.9.7 DELETE ALL RTNS.....	11-81
11.6.9.8 DELETE RTN .....	11-81
11.6.9.9 EMERGENCY ON/OFF.....	11-81
11.6.9.10 FORCE TELL ON/OFF .....	11-81
11.6.9.11 HISTORY .....	11-81
11.6.9.12 HULTEC TDA.....	11-87
11.6.9.13 LOCAL REMARKS.....	11-90
11.6.9.14 NU-TRK (ELINT and Acoustic tracks) .....	11-90
11.6.9.15 PARENT TRACK .....	11-91
11.6.9.16 PRINT.....	11-92
11.6.9.17 RAW DATA.....	11-92
11.6.9.18 RCVD REMARKS.....	11-93
11.6.9.19 REMOVE FTN (Platform Track only) .....	11-93
11.6.9.20 REPROCESS (ELINT only).....	11-94
11.6.9.21 SCOPE & TYPE .....	11-94
11.6.9.22 SYSTEMS.....	11-95
11.6.9.23 TAKE/RELEASE CTRL (Link11PIH/Link11EDO).....	11-95
11.6.9.24 TECH DATA .....	11-95
11.6.9.25 XMIT (Platform and Unit track types ) .....	11-97
11.7 EDIT OWNSHIP.....	11-97
11.8 AMPLIFY TRACKS.....	11-98
11.9 DELETE.....	11-101
11.10 XMIT .....	11-103
11.11 PRINT .....	11-105
11.12 SELECT ALL.....	11-105

---

11.13 SEARCH .....	11-105
11.13.1 ATTRIBUTES BOX.....	11-107
11.13.2 TRACK TYPE BOX .....	11-111
11.13.3 TIMELATE BOX.....	11-111
11.13.4 MODES BOX .....	11-111
11.13.5 TRACK GROUP BOX .....	11-112
11.13.6 CAT/THREAT BOX.....	11-112
11.13.7 REAL/EXERCISE BOX.....	11-112
11.13.8 TRACK SCOPE BOX.....	11-113
11.13.9 GEO LOCATION BOX.....	11-113
11.13.10 DATABASE SEARCH WINDOW POP-UP MENU.....	11-121
11.14 QUICK SEARCH .....	11-123
11.15 SEARCH TO REPLACE .....	11-125
11.16 SEARCH FILTER TABLE .....	11-128
11.17 BOOLEAN SEARCH FILTERS.....	11-130
11.18 BOOLEAN TRACK SEARCH .....	11-132
11.19 COMPARE .....	11-139
11.19.1 MERGING TRACKS .....	11-146
11.19.2 ADD SYNONYM .....	11-147
11.19.3 ADD PIF DON'T CARE .....	11-148
11.20 DUPLICATES.....	11-151
11.21 TRACK STATUS.....	11-152
11.22 TRACK SUMMARIES .....	11-154
11.22.1 TRACK.....	11-154
11.22.2 SELECTED TRACK .....	11-166
11.22.3 AMBIGUITY .....	11-166
11.22.4 ELINT TRACK .....	11-167
11.22.4.1 Resolve Candidate Comparison.....	11-170
11.22.5 ELINT AMBIGUITY .....	11-176
11.22.6 SELECTED ELINT .....	11-177
11.22.7 ACOUSTIC/SUB.....	11-177

11.22.8 UNIT TRACK.....	11-180
11.22.9 UNIT AMBIGUITY.....	11-183
11.22.10 SELECTED UNIT.....	11-183
11.22.11 NIPS TRACK.....	11-183
11.23 TRACK TABLES.....	11-185
11.23.1 HFDF TABLE.....	11-186
11.23.1.1 Add an HFDF Station .....	11-188
11.23.1.2 HFDF STATION TABLE Pop-Up Menu.....	11-188
11.23.2 AEN TABLE.....	11-188
11.23.2.1 Add an AEN Entry .....	11-190
11.23.2.2 AEN TABLE Pop-Up Menu.....	11-192
11.23.3 ELINT CONFIGURATION.....	11-192
11.23.4 ELNOT SYNONYM TABLE.....	11-195
11.23.4.1 Add an ELNOT Synonym.....	11-197
11.23.4.2 ELNOT SYNONYM TABLE Pop-Up Menu .....	11-198
11.23.5 ELNOT VERSION TABLE.....	11-198
11.23.5.1 Add an Emitter.....	11-201
11.23.5.2 ELNOT VERSION TABLE Pop-Up Menu .....	11-209
11.23.6 CI COMPATIBILITY TABLE.....	11-209
11.23.6.1 Add a CI Compatibility Set.....	11-210
11.23.6.2 CI COMPATIBILITY SET Pop-Up Menu.....	11-211
11.23.7 RADAR FUNCTION TABLE .....	11-211
11.23.7.1 Add a Radar Function Code .....	11-213
11.23.7.2 RADAR FUNCTION CODE TABLE Pop-Up Menu .....	11-213
11.23.8 RF DON'T CARE TABLE.....	11-213
11.23.8.1 Add Records– RF Don't Care Table .....	11-215
11.23.8.2 RF DON'T CARE TABLE Pop-Up Menu.....	11-215
11.23.9 SCAN TYPE TABLE.....	11-215
11.23.9.1 Add a Scan Type Code .....	11-216
11.23.9.2 SCAN TYPE Pop-Up Menu.....	11-217
11.23.10 CALLSIGN DON'T CARE.....	11-217

---

11.23.10.1 Add Records– CALLSIGN Don't Care Table.....	11-219
11.23.10.2 CALLSIGN DON'T CARE Pop-Up Menu .....	11-219
11.23.11 PIF DON'T CARE .....	11-219
11.23.11.1 Add Records– PIF Don't Care Table.....	11-221
11.23.11.2 PIF DON'T CARE Pop-Up Menu .....	11-222
11.23.12 PIF NICKNAMES .....	11-222
11.23.12.1 Add PIF Nickname.....	11-224
11.23.13 DI NICKNAMES.....	11-225
11.23.13.1 Add DI Nickname .....	11-227
11.23.13.2 DI Nickname Pop-Up Menu.....	11-228
11.23.14 SHIP SYNONYMS .....	11-228
11.23.14.1 Add Ship Synonym .....	11-229
11.23.14.2 SHIP SYNONYM Pop-Up Menu .....	11-230
11.23.15 SOURCE XREF TABLE.....	11-230
11.23.15.1 Add Cross Reference Record.....	11-232
11.23.15.2 SOURCE XREF TABLE Pop-Up Menu.....	11-233
11.23.16 FLAG-THREAT TABLE .....	11-233
11.23.16.1 Add Flag Threat Record .....	11-235
11.23.16.2 FLAG THREAT Pop-Up Menu.....	11-235
11.23.17 TYPE-CATEGORY TABLE .....	11-235
11.23.17.1 Add Unit Type Record.....	11-237
11.23.17.2 UNIT TYPES Pop-Up Menu.....	11-237
11.23.18 SHIP CLASS TABLE.....	11-237
11.23.18.1 Add Ship Class Record .....	11-238
11.23.18.2 SHIP CLASS Pop-Up Menu.....	11-239
11.23.19 SENSOR TABLE.....	11-240
11.23.19.1 Edit Sensor Record .....	11-240
11.23.19.2 SENSOR TABLE Pop-Up Menu.....	11-241
11.23.20 SOURCE CODE TABLE .....	11-241
11.23.20.1 Edit Source Record .....	11-242
11.23.20.2 SOURCE TABLE Pop-Up Menu .....	11-243

11.24 LINK CONTROLS.....	11-243
11.24.1 LINK DLRPS .....	11-244
11.24.1.1 LINK DLRP Window Fields .....	11-245
11.24.1.2 Edit Link DLRP Data .....	11-245
11.24.1.3 LINK DLRP'S Pop-Up Menu .....	11-246
11.24.2 LINK ARCHIVE .....	11-246
11.24.2.1 Cat/Threat Symbology– Link Archive Option.....	11-246
11.24.2.2 Misc. Link11 Symbology– Link Archive Option.....	11-248
11.24.3 LINK AUTODELETE .....	11-249
11.24.3.1 Link Autodelete for Cat/Threat .....	11-250
11.24.3.2 Link Autodelete for Link-11.....	11-251
11.24.3.3 AUTO-DELETE TABLE Pop-Up Menu .....	11-252
11.24.4 LINK STATUS.....	11-252
11.24.5 LINK FILTER .....	11-257
11.24.5.1 Link Filters for Cat/Threat.....	11-257
11.24.5.2 Link Filters for Misc. Link-11.....	11-258
11.25 TRACK POP-UP MENU .....	11-259
11.25.1 TITLE .....	11-261
11.25.2 QUICK REPORT .....	11-261
11.25.3 SELECTED SUMMARY .....	11-261
11.25.4 XMIT .....	11-262
11.25.5 NU TRACK .....	11-262
11.25.6 COPY.....	11-262
11.25.7 DELETE .....	11-262
11.25.8 NIPS UPDATE .....	11-263
11.25.8.1 View Information for a NIPS Candidate.....	11-265
11.25.9 TRACK CONTROL .....	11-267
11.25.10 RANGE CIRCLES .....	11-270
11.25.11 TRACK TO PIM .....	11-271
11.25.12 SPEED LEADER .....	11-271
11.25.13 AOU .....	11-272

---

11.25.14 10-PT. HISTORY.....	11-272
11.25.15 CUSTOM HISTORY.....	11-273
11.25.15.1 SOLA Tool.....	11-276
11.25.16 DEAD RECKON .....	11-277
11.25.17 DR TRAILERS .....	11-277
11.25.18 MTST HISTORY.....	11-278
 CHAPTER 12: SUPPORT TDAs.....	12-1
12.0 support tdas .....	12-1
12.1 pimtracks.....	12-2
12.1.1 add a pimtrack .....	12-4
12.1.1.1 General Data Area.....	12-7
12.1.1.2 NAVIGATION Box.....	12-7
12.1.1.3 TYPE Box.....	12-8
12.1.1.4 POSITION ALONG PIMTRACK Box .....	12-8
12.1.1.5 CPA TO PIMTRACK.....	12-9
12.1.1.6 Scroll List.....	12-9
12.1.1.7 Add a PIM Track Leg.....	12-11
12.1.1.8 PIMTRACK EDIT Pop-Up Menu.....	12-12
12.1.2 PIImtracks pop-up menu.....	12-13
12.2 OVERLAYS .....	12-16
12.2.1 ADD AN OVERLAY .....	12-19
12.2.1.1 Polyline Tool and Line Tool.....	12-24
12.2.1.2 Arc, Circle, and Ellipse Tools.....	12-36
12.2.1.3 Sector Tool.....	12-40
12.2.1.4 Axis Tool .....	12-43
12.2.1.5 Rectangle Tool .....	12-45
12.2.1.6 Text Tool .....	12-47
12.2.1.7 Symbol Tool.....	12-50
12.2.1.8 Reorder Overlay Objects.....	12-53
12.2.1.9 OVERLAY ADD Pop-Up Menu.....	12-55

12.2.2 OVERLAY FILTERS .....	12-55
12.2.3 OVERLAYS POP-UP MENU.....	12-58
12.3 SITES.....	12-1
12.3.1 ADD A SITE.....	12-62
12.3.1.1 IDENTIFIERS Box.....	12-63
12.3.1.2 LOCATION AND SYMOLOGY Box .....	12-64
12.3.1.3 REMARKS Box.....	12-64
12.3.2 SITES POP-UP MENU .....	12-64
12.4 TRACK GROUPS.....	12-64
12.4.1 ADD A TRACK GROUP .....	12-67
12.4.1.1 GROUP ATTRIBUTES Box .....	12-68
12.4.1.2 GROUP STATUS Box .....	12-69
12.4.1.3 Scroll List .....	12-70
12.4.1.4 ADD TRACK GROUP Pop-up Menu.....	12-70
12.4.2 TRACK GROUPS POP-UP MENU .....	12-70
12.5 SCREEN KILO .....	12-71
12.5.1 ADD A SCREEN KILO FORMATION .....	12-73
12.5.1.1 Add a Sector to the Formation.....	12-77
12.5.1.2 SCREEN KILO EDIT Pop-Up Menu .....	12-78
12.5.2 ACTIVATE A FORMATION .....	12-79
12.5.2.1 Attach the Formation to a Specified Object .....	12-79
12.5.2.2 Set the Formation Orientation and Plot Time.....	12-81
12.5.3 Example of a Screen Kilo Formation on the Display .....	12-83
12.5.4 SCREEN KILO FORMATIONS POP-UP MENU.....	12-84
12.6 FOUR WHISKEY .....	12-84
12.6.1 ADD A FOUR WHISKEY FORMATION .....	12-86
12.6.1.1 Add a Unit to the Formation.....	12-89
12.6.1.2 FOUR WHISKEY EDIT Pop-Up Menu .....	12-90
12.6.2 ACTIVATE A FORMATION .....	12-91
12.6.2.1 Attach the Formation to a Specified Object .....	12-91
12.6.2.2 Set the Formation Orientation and Plot Time.....	12-93

---

12.6.3 Example of a 4W Formation on the Display .....	12-96
12.6.4 FOUR WHISKEY FORMATIONS POP-UP MENU.....	12-96
CHAPTER 13: FOTC/BCST .....	13-1
13.0 FOTC/BCST .....	13-1
13.1 REPORT LOG .....	13-2
13.1.1 EDIT AND REPROCESS REPORT MESSAGE.....	13-5
13.1.2 REPORT MESSAGE LOG POP-UP MENU .....	13-6
13.2 ATO MSG LOG.....	13-7
13.2.1 ATO SEGMENTS.....	13-13
13.2.2 ATO RAW DATA .....	13-16
13.2.3 PLOT ATOS.....	13-19
13.2.4 ATO PROCESSING .....	13-33
13.3 INPUT MSG FILTERS .....	13-36
13.3.1 ADD A NEW INCOMING MESSAGE FILTER.....	13-40
13.3.1.1 General Information Area .....	13-42
13.3.1.2 SOURCE Box.....	13-43
13.3.1.3 MSG TYPE Box .....	13-43
13.3.1.4 PRECEDENCE Box .....	13-43
13.3.1.5 ACTION Box.....	13-43
13.3.2 MESSAGE INPUT FILTER POP-UP MENU .....	13-44
13.3.3 INPUT MESSAGE FILTERS EXAMPLES.....	13-44
13.4 INPUT GEO FILTERS .....	13-47
13.4.1 ADD A NEW ATTRIBUTE GEO-FILTER .....	13-50
13.4.1.1 General Fields.....	13-51
13.4.1.2 ATTRIBUTES Box .....	13-52
13.4.1.3 REAL/EXERCISE Box .....	13-52
13.4.1.4 TIMELATE Box .....	13-52
13.4.1.5 CAT/THREAT Box.....	13-53
13.4.1.6 GEO LOCATION Box.....	13-53
13.4.2 ADD AN ELINT GEO-FILTER.....	13-62

13.4.3 SELECT GEO-FILTER POP-UP MENU.....	13-63
13.5 FOTC PARAMETERS .....	13-65
13.5.1 BGDBM CONFIGURATION BOX.....	13-67
13.5.2 BROADCAST HEADER BOX.....	13-70
13.5.3 DESTINATION CHANNELS BOX.....	13-72
13.5.4 EDIT BGDBM CONFIGURATION POP-UP MENU .....	13-72
13.5.5 MULTI-FOTC MODE.....	13-76
13.5.5.1 How to Set Up Multi-FOTC Mode .....	13-76
13.5.5.2 Using Multi-FOTC Mode .....	13-77
13.5.5.3 Advantages/Disadvantages of Multi-FOTC Mode .....	13-78
13.6 FOTC SITREP.....	13-78
13.7 FOTC SITREP SUMMARY .....	13-82
13.8 BROADCASTS.....	13-86
13.8.1 ADD A BROADCAST CHANNEL.....	13-88
13.8.2 EDIT A BROADCAST CHANNEL.....	13-89
13.8.2.1 Create and Activate a GCCS WAN Broadcast .....	13-96
13.8.2.2 Create and Activate a GEN Broadcast .....	13-102
13.8.3 BROADCASTS POP-UP MENU.....	13-115
 CHAPTER 14: TACTICAL DECISION AIDS.....	14-1
14.0 TACTICAL DECISION AIDS (TDAS).....	14-1
14.1 QUICK CPA.....	14-3
14.1.1 TARGET BOX .....	14-5
14.1.2 MASTER REFERENCE BOX .....	14-5
14.1.3 NAVIGATION BOX.....	14-6
14.1.4 CPA BOX .....	14-6
14.2 QUICK INTERCEPT .....	14-7
14.2.1 TARGET POSITION BOX.....	14-9
14.2.2 INTERCEPT INFORMATION BOX.....	14-9
14.2.3 NAVIGATION BOX.....	14-10
14.2.4 INTERCEPT CALCULATION BOX .....	14-10

---

14.3 TWO TRACK ANALYSIS.....	14-12
14.3.1 TRACK 1 AND TRACK 2 BOXES .....	14-13
14.3.2 TIME WINDOW BOX .....	14-16
14.3.3 GENERATE BEARING/RANGE VS TIME GRAPH .....	14-16
14.3.4 PLOT THE TWO TRACK ANALYSIS .....	14-18
14.3.5 CPA TRACK 1 TO TRACK 2 BOX .....	14-18
14.4 TRACK HISTORY ANALYSIS .....	14-18
14.4.1 TRACK HISTORY ANALYSIS WINDOW SCROLL LIST .....	14-20
14.4.2 TRACK INFORMATION BOX .....	14-21
14.4.3 PLOT TOGGLERS BOX .....	14-23
14.4.4 SINGLE POINT EXPANSION BOX.....	14-28
14.4.5 MTST SOLUTION BOX.....	14-29
14.4.6 TRACK HISTORY ANALYSIS POP-UP MENU.....	14-29
14.5 TIMELATE STATISTICS.....	14-30
14.5.1 TIMELATE STATISTICS GENERAL FIELDS AREA .....	14-31
14.5.2 TIMELATE STATISTICS BAR CHART .....	14-32
14.6 LIMIT LINES.....	14-33
14.6.1 REFERENCE TRACK BOX .....	14-34
14.6.2 LIMIT CONSTRAINTS BOX.....	14-36
14.6.3 CALCULATE LIMIT LINES .....	14-36
14.6.4 COURSE TO AVOID BOX .....	14-37
14.6.4.1 Calculate Course to Avoid.....	14-39
14.6.5 LIMIT LINES OF APPROACH WINDOW POP-UP MENU .....	14-40
14.7 BEARING OVERLAY.....	14-41
14.8 STATUS BOARDS .....	14-43
14.8.1 ADD A STATUS BOARD.....	14-45
14.8.1.1 General Information Area .....	14-46
14.8.1.2 REFERENCE Box .....	14-46
14.8.1.3 SELECT ASTAB COMPONENTS Box .....	14-47
14.8.2 START MONITORING A STATUS BOARD.....	14-49
14.8.2.1 REFERENCE Box .....	14-51

14.8.2.2 ASTAB Window Scroll List.....	14-51
14.8.2.3 ASTAB Window Pop-Up Menu .....	14-52
14.8.3 STATUS BOARDS WINDOW POP-UP OPTIONS.....	14-53
14.9 MOBOARD OVERLAY.....	14-53
14.10 CROSSFIX.....	14-55
14.10.1 CREATE REPORTS.....	14-58
14.10.1.1 Create Report from a User Point.....	14-58
14.10.1.2 Create HFDF Report .....	14-60
14.10.1.3 Choose Track Report.....	14-61
14.10.2 VIEW AND ACTIVATE REPORT INFORMATION.....	14-62
14.10.3 COMPUTE.....	14-63
14.10.4 SOLUTION CONTACT .....	14-64
14.10.4.1 New Contact.....	14-64
14.10.4.2 Update Contact.....	14-65
14.10.5 CROSSFIX ANALYSIS WINDOW POP-UP MENU.....	14-66
14.11 CAP ENGAGEMENT .....	14-66
14.11.1 HVU AND THREAT BOXES.....	14-68
14.11.2 CAP INPUTS BOX.....	14-71
14.11.3 CAP NAVIGATION BOX.....	14-71
14.11.4 PLOT COLORS BOX .....	14-72
14.11.5 THE COMPUTE BUTTON .....	14-73
14.11.6 LAUNCH PARAMETERS BOX .....	14-73
14.11.7 INTERCEPT PARAMETERS BOX .....	14-74
14.11.8 PLOTTED RESULTS ON THE TACTICAL DISPLAY .....	14-75
14.12 SAR .....	14-77
14.12.1 DATUM BOX .....	14-80
14.12.2 SEARCH AREA BOX .....	14-80
14.12.3 PATTERNS BOX.....	14-82
14.12.3.1 TYPE Box .....	14-84
14.12.3.2 LEGS Box .....	14-89
14.12.3.3 POSITION ALONG PATTERN Box.....	14-90

---

14.12.3.4 ADD PATTERN Pop-Up Menu .....	14-91
14.12.4 SAR PLANNING POP-UP MENU.....	14-91
14.13 SAT DATABASE .....	14-91
14.13.1 SATELLITE DATABASE WINDOW .....	14-93
14.13.1.1 Add a New Satellite .....	14-96
14.13.2 SATELLITE DATABASE POP-UP MENU .....	14-98
14.13.3 VIEW DATA FOR PLOT-ACTIVE SATELLITE .....	14-110
14.14 SAT VULNERABILITY .....	14-111
14.14.1 UPPER-LEFT BOX IN SATELLITE VULNERABILITY WINDOW.....	14-113
14.14.1.1 Choosing a Point.....	14-113
14.14.1.2 Choosing a Contact .....	14-114
14.14.1.3 Choosing a PIM track.....	14-114
14.14.1.4 Choosing an Area.....	14-115
14.14.2 UPPER-RIGHT BOX IN SAT VUL WINDOW.....	14-116
14.14.3 FIELDS IN MIDDLE OF SAT VUL WINDOW .....	14-117
14.14.4 SCROLL LIST IN SAT VUL WINDOW.....	14-117
14.14.5 VULNERABILITY BUTTON .....	14-118
14.14.6 NEXT VUL BUTTON .....	14-121
14.14.7 SAFE VUL BUTTON .....	14-123
14.14.8 STEP PLOT BUTTON.....	14-124
14.14.9 SATELLITE VULNERABILITY POP-UP MENU.....	14-128
14.15 CALCULATOR.....	14-133
14.16 COORDINATE CONVERSION .....	14-134
14.17 DATUM TRANSLATION.....	14-136
CHAPTER 15: SLIDES .....	15-1
15.0 SLIDES.....	15-1
15.1 PRINT SCREEN .....	15-2
15.1.1 PRINT OPTIONS .....	15-4
15.1.1.1 HP PaintJet and HP PaintJet XL.....	15-5

15.1.1.2 Tektronix or Seiko.....	15-7
15.1.1.3 LaserJet III and IV .....	15-9
15.1.1.4 Postscript– B & W or Color .....	15-11
15.1.1.5 Canon BubbleJet or HP DeskJet 550C .....	15-13
15.2 SAVE SLIDE .....	15-14
15.3 RECALL SLIDE .....	15-16
15.4 BRIEFING SLIDES .....	15-20
15.4.1 ADD A BRIEF .....	15-21
15.4.2 EDIT A BRIEF .....	15-23
15.4.3 VIEW BRIEFING SLIDES .....	15-23
15.4.4 JOTS BRIEFER POP-UP MENU .....	15-25
 APPENDIX A: COMMON OPERATIONS.....	A-1
1.0 INTRODUCTION.....	A-1
1.1 ACTIVATE.....	A-2
1.2 ADD.....	A-2
1.3 APPLY .....	A-2
1.4 ARCHIVE.....	A-4
1.5 CANCEL .....	A-5
1.6 COLOR SELECTION .....	A-6
1.7 COPY .....	A-6
1.8 DEACTIVATE .....	A-7
1.9 DELETE.....	A-7
1.10 EDIT.....	A-7
1.11 EXIT .....	A-8
1.12 EXPORT.....	A-10
1.13 HELP .....	A-1
1.14 OK .....	A-1
1.15 PRINT .....	A-12
1.16 RESTORE .....	A-14
1.17 SELECT ALL AND UNSELECT ALL .....	A-15

---

1.18 SELECT A TRACK .....	A-15
1.19 SELECT COLUMNS.....	A-18
1.20 XMIT .....	
APPENDIX B: ACRONYM TABLE.....	B-1
1.0 INTRODUCTION.....	B-1
1.1 ACRONYM TABLE.....	b-1
APPENDIX C: FIELD VALUES.....	c-1
1.0 SELECTABLE FIELD VALUES.....	c-1
1.1 CLASS.....	
1.2 ECHELON LEVEL .....	c-7
1.3 GROUP CATEGORY.....	c-10
1.4 HULL PROFILE CODES.....	c-11
1.5 ORGANIZATION (ORG) TYPE.....	c-12
1.6 PLATFORM TYPES.....	c-16
1.7 SCAN TYPE .....	c-46
1.8 SENSOR TYPE.....	c-47
1.9 SHIP TYPE .....	c-50
APPENDIX D: MAP PROJECTIONS .....	d-1
1.0 MAP PROJECTIONS.....	d-1
1.1 ALBERS EQUAL-AREA CONIC .....	d-2
1.2 BONNE.....	d-2
1.3 CASSINI .....	d-2
1.4 CYLINDRICAL EQUAL AREA .....	d-2
1.5 ECKERT IV.....	d-2
1.6 ECKERT VI.....	d-3
1.7 EQUIDISTANT CYLINDRICAL.....	d-3
1.8 LAMBERT CONFORMAL CONIC.....	d-3
1.9 LINEAR .....	d-3

1.10 MERCATOR.....	d-3
1.11 MILLER CYLINDRICAL.....	d-4
1.12 MOLLWEIDE .....	d-4
1.13 ORTHOGRAPHIC.....	d-4
1.14 POLYCONIC.....	d-4
1.15 SINUSOIDAL .....	d-5
1.16 TRANSVERSE CYLINDRICAL EQUAL AREA.....	d-5
1.17 TRANSVERSE MERCATOR .....	d-5
1.18 VAN DER GRINTEN.....	d-5
 APPENDIX e: country codes .....	E-1
1.0 introduction .....	e-1
1.1 country codes (sorted by country) .....	e-1
1.2 country codes (sorted by country code) .....	e-4
 APPENDIX F: JMCIS 2.2 correlation guide.....	f-1
 JMCIS PLRS INTERFACE (JPI) .....	JPI-1
1.0 OVERVIEW.....	JPI-1
1.1 PLI/PLRS .....	JPI-1
1.2 PLIS CHANNEL .....	JPI-1
1.2.1 EDIT PLIS INTERFACE.....	JPI-2
1.3 PLRS OPTIONS .....	JPI-4
1.3.1 Edit Pop-Up Menu .....	JPI-9
1.3.2 COMPARE .....	JPI-10
 TACTICAL COMMUNICATION INTERFACE MODULE (TCIM) .....	TCIM-1
1.1 TCIM OVERVIEW.....	TCIM-1
2.0 SETTING UP TCIM CHANNEL PROTOCOLS .....	TCIM-1
2.1 MTS-MARINE TACTICAL SYSTEMS .....	TCIM-4

---

2.1.1 MTS BROADCAST MESSAGE TYPES .....	TCIM-5
2.1.2 MTS DEVICE CONFIGURATION.....	TCIM-6
2.1.3 PROTOCOL INIT MESSAGE .....	TCIM-7
2.1.4 SUBSCRIBER TABLE REQUEST.....	TCIM-9
2.1.5 RNAD CONF REQUEST.....	TCIM-10
2.1.6 110A CONF .....	TCIM-11
2.2 MTSV5-MARINE TACTICAL SYSTEMS, VERSION 5.....	TCIM-11
2.2.1 MTS VERSION 5 BROADCAST MESSAGE TYPES .....	TCIM-12
2.2.2 MTS VERSION 5 DEVICE CONFIGURATION.....	TCIM-13
2.2.3 PROTOCOL INIT (MTS V5) .....	TCIM-14
2.3 NIFS-INTERIM FIRE SUPPORT, ENHANCED.....	TCIM-17
2.3.1 IFS DEVICE CONFIGURATION .....	TCIM-18
2.3.2 IFS 6/9 CHARACTER INIT .....	TCIM-21
2.3.3 IFS 6/9 CHARACTER SUBSCRIBER TABLE .....	TCIM-23
2.3.4 IFS CHANNEL RECEIVE DISABLE.....	TCIM-26
2.3.5 IFS CHANNEL RECEIVE ENABLE .....	TCIM-26
2.3.6 IFS PROTOCOL RESET.....	TCIM-27
2.3.7 IFS CHANNEL DISABLE.....	TCIM-27
2.3.8 IFS CHANNEL ENABLE.....	TCIM-27
 TELECOMMUNICATIONS LINE CONTROLLER-10 (TLC-10).....	TLC-10-1
1.0 OVERVIEW .....	TLC-10-1
1.1 EDIT TLC-10 .....	TLC-10-1
1.2 TLC-10 EDIT POP-UP MENU.....	TLC-10-6

**Notes**

---

## **Notes**